



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	04025	Hair Guard Screw	2
2		Hair Guard	
2a	15248	Hair Guard - Edjer (UL)	1
2b	15246	Hair Guard - T-Edjer (UL)	1
2c	15247	Hair Guard - (CSA)	1
3		Front Cover Screw	
3a	15023	Front Cover Screw	1
3b	04933	Black Front Cover Screw	1
4		Rear Cover Screw	
4a	04023	Rear Cover Screw	1
4b	04653	Black Rear Cover Screw	1
5		Upper Housing	
5a	15916	Upper Housing	1
5b	15914	Black Upper Housing	1
5c	15569	Upper Housing - Experience	1
6		Armature Assembly	
6a	S15511	Armature Assembly - 2 wire (includes Tension Spring Assembly, Tension Spring Pad, and Tension Spring Screw.)	1
6b	S15537	Armature Assembly - 3 wire (includes Tension Spring Assembly, Tension Spring Pad, and Tension Spring Screw.)	1
7		Field Core Assembly	
7a	S15502	Field Core Assembly - 2 wire	1
7b	S15544	Field Core Assembly - 3 wire	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
8		Cord	
8a	15771	Cord Set - 2 wire	1
8b	15536	Cord Set - 3 wire	1
9	65842	Hanger Hook	1
10		Lower Housing	
10a	15911	Lower Housing	1
10b	15909	Black Lower Housing	1
11	15029	Terminal Screw	2
12			
13	15341	Switch Button	1
14	26899	Lower Blade Screw	2
15	15024	Field Screw	2
16	15013	Cover Screw Pad	1
17	15071	Cover Screw Pad Screw	1
18	15046	Field Screw	1
19	04229	Terminal Screw (3 wire only)	1
20	01296	Lock Washer (3 wire only)	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.