


$MODEL\ D-3\ CORDLESS$ $TRIMMER\ 120\ VOLT$

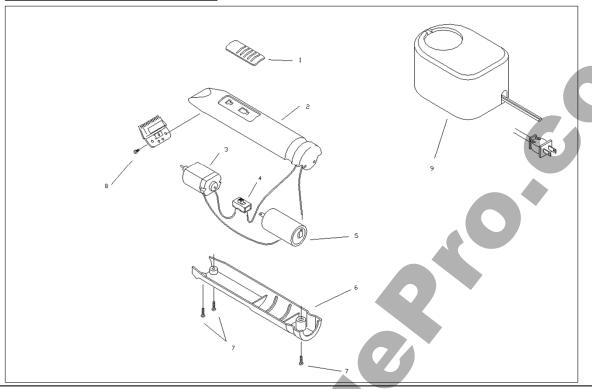

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	32564	Switch Button	1
2		Upper Housing Assembly	
2a	32588	Upper Housing Assembly (Edjer II)	1
2b	32587	Upper Housing Assembly (T-Edjer II)	
2c	32999	Upper Housing Assembly (TS Salon T)	1/
3	32098	Motor Assembly	1
4	32628	Switch	
5	69018	Battery	1
6	32093	Lower Housing	1
7	32580	Housing Screw	3
8	29271	Blade Screw	2
9	32730	Charger Assembly	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.

FORM 12242 Rev-B SERVICE CENTER