



Item No.	Part No.	Description	Qty. Req'd	Item No.	Part No.	Description	Qty. Req'd
1	63121	Lower Housing	1	14	63126	Switch Button	1
2		Upper Housing		15	63164	Corded Adaptor	1
2a	63123	Upper Housing - Printed	1	16	63081	Electrical Assembly	1
3	64606	Front Housing Screw	2	17	100082	Hair Guard	1
4	60804	Rear Housing Screw	2	18	63111	Front Motor Frame	1
5	21743	Hinge Assembly	1	19	63131	Rear Motor Frame	1
6	27864	Blade Hinge Screw	2	20	64529	Field Shell Assembly	1
7	65828	Screw	2	21	63128	Switch Actuator	1
8	S20651	Quad Blade Drive Assy. - Bagged	1	22	65805	Brush Retain Clip	2
9	21067	Small Bearing Ring	1	23	63114	Carbon Brush w/ Terminal	2
10	21068	Large Bearing Ring	1	24	64514	Motor Frame Clip	2
11	63803	Brush Spring	2	25	63167	Armature Assembly	1
12	63134	Hanger Bail	1	26	22909	Booster Spring	1
13	60083	Oil Seal	1				

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.