



PARTS LIST
POWERMAX CLIPPER

USE ONLY GENUINE OSTER PARTS
USE OF WRONG PARTS MAY BE HAZARDOUS.

NEW MODELS ADDED ⇨ FIRST ISSUE	COLUMN #:										
78004-011-000											
78004-012-000											
78004-010-600											
78004-013-700											

INSTRUCTIONS	COL. NO.
78004	

MODEL OR SERVICE NO. COLUMN	1	2	3	4	5	6	7	8	9	10	11
Basic Parts											
78004-011											
78004-012											
78004-010-600											
78004-013-700											

INDEX NO.	PART NUMBER	* WAS PART NO.	DESCRIPTION	Basic Parts	QUANTITY REQUIRED													
					78004-011	78004-012	78004-010-600	78004-013-700										
1	* 124825-000-000		UPPER HSG.	1														
2	INCLUDED W/#1		UPPER METAL	1														
3			NAME PLATE	1														
4	124824-000-000		BUTTON OUT	1														
5			BUTTON LOCK	1														
6			BUTTON SPRING	1														
7			BUTTON HOLDER	1														
8			BUTTON CONNECT	1														
9	124822-000-000		MOTOR	1														
10			DRIVE COUPLE	1														
11			DRIVE ROD	1														
12			FRONT COVER	1														
13			BLADE ASSEMBLY	1														
14			TONGUE	1														
15			PIN	1														
16			PLATE MOUNTING	1														
17			SPRING LEAF	1														
18			SCREW	2														
19			SCREW	2														
20			MOTOR FOAM	1														
21			MOTOR HOLDER	1														
22			SCREW	2														
23			BEARING	1														
24			ECCENTRIC	1														
25			LOWER HSG.	1														
26			SCREW	4														
27			MOTOR SPONGE	4														
28			RATING LABEL	1														
29			CABLE TIE	1														
30	124823-000-000		POWER CORD	1														
31	INCLUDED W/#30		STRAIN RELIEF	1														
32			HOOK	1														
33			RUBBER WASHER	2														
34	124416-000-000		PCB BOARD	1														
35			SWITCH	1														
36			RECTIFIER BRIDGE	1														
37			RESISTANCE	1														
38			RESISTANCE	1														
39			PLATE (LEFT)	1														
40			PLATE (RIGHT)	1														
41			SCREW	2														
-	118684-001-000		DRIVE ASSEMBLY	1														

*Note – When ordering 1 of 124825 you must order 1 of 125187 as these are assembled with screws, bale, switch button, and Oster label.

MANUAL: _____
SECTION: _____

CONTINUED ON REVERSE SIDE



