



PARTS LIST
MAGNETIC CLIPPER



INSTRUCTIONS	COL. NO.
106351-000-000	ALL

USE ONLY GENUINE OSTER PARTS
USE OF WRONG PARTS MAY BE HAZARDOUS.

NEW MODELS ADDED	⇔	FIRST ISSUE	05/01	COLUMN #:	ALL														
103582-030-001, EQUINE TRIMMER									X										
103582-030-000, PET						X	X												
103582-025-000, "CRAFTER"						X													
103582-020-000, "CREATOR"						X													
MODEL OR SERVICE NO. COLUMN																			

INDEX NO.	PART NUMBER	* WAS PART NO.	DESCRIPTION	Basic Parts	QUANTITY REQUIRED															
					076650-100-000	076650-101-000	078650-100-000	078650-101-000	078650-102-000	6	7	8	9	10	11					
1	085022-005-099		LOWER HOUSING-BLACK	1																
1	085022-045-389		LOWER HOUSING-RED	1	1															
1	085022-015-499		LOWER HOUSING-GOLD	1																
2	085025-000-000		MOUNTING PLATE	1			1	1	1											
3	085040-000-000		GIB SPRING	1																
4	085018-000-000		WASHER-BLADE MOUNTING PLATE	1																
5	103500-000-000		SCREW-MOUNTING PLATE	1																
6	105530-000-000		SPRING-BLADE GUIDE	1																
7	105531-000-000		WASHER-SPRING RETAINING	1																
8	042113-025-000		SCREW-SPRING RETAINING	2																
9	085005-100-000		MOTOR ASSEMBLY	1																
10	042114-060-000		SCREW-MOTOR MOUNT	3																
11	085008-100-000		POWER CORD ASSEMBLY	1																
12	085035-000-299		NUT-SPRING ADJUST	1																
13	085033-000-190		SCREW-SPRING ADJUST	1																
14	107264-000-000		SPRING BIASING-LEFT	1																
15	085019-001-090		BLADE DRIVE	1																
16	042527-000-000		BLADE-UPPER	1																
17	085037-005-100		ADJUSTMENT LEVER ASSY-BLACK	1	1															
17	085037-045-100		ADJUSTMENT LEVER ASSY-RED	1		1														
17	085037-015-100		ADJUSTMENT LEVER ASSY-GOLD	1			1	1	1											
18	058592-000-000		BLADE-LOWER	1	1	1														
18	104821-000-000		BLADE-LOWER-ANIMAL	1			1	1	1											
19	085031-000-000		SCREW-ADJUST. BLADE RETENSION	2																
20	102524-099-090		INSERT-SOFT TOUCH-LEFT	1																
21	102583-099-090		INSERT-SOFT TOUCH-RIGHT	1																
22	106897-100-000		UPPER HOUSING ASSY-BLACK	1	1															
22	106896-100-000		UPPER HOUSING ASSY-RED	1		1														
22	103079-015-100		UPPER HOUSING ASSY-GOLD	1			1	1	1											
23	085029-000-190		SWITCH BUTTON	1																
24	085030-000-090		SWITCH LEVER	1																
25	085014-100-000		CONTACT-SWITCH	1																
26	106882-025-000		RATING LABEL-CREATOR	1	1															
26	106882-030-000		RATING LABEL-CRAFTER	1		1														
26	106882-040-000		RATING LABEL-PET	1			1	1												
26	106882-035-000		RATING LABEL-EQUINE	1					1											
27	103714-000-000		HOUSING SPRING ALIGNMENT INSERT	1																
28	103636-000-000		SPRING BIASING-RIGHT	1																
29	042114-060-000		SCREW-HSG ASSEMBLY	1																

CAUTION:
NUMBERS SHOWN ON DRAWING ARE
INDEX NUMBERS ONLY. ORDER PARTS BY
CORRECT PART NUMBER.

