andis®

MODEL RBC CLIPPER
120V, 60Hz

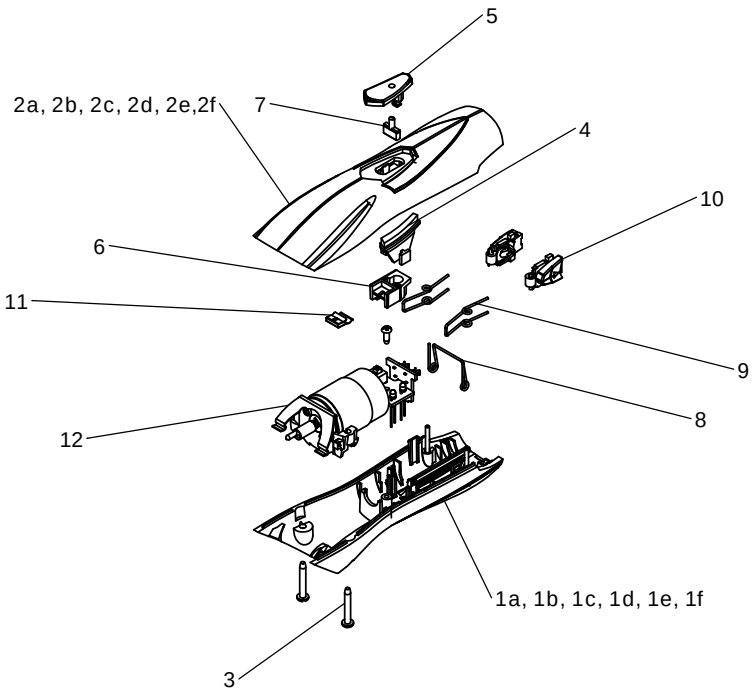

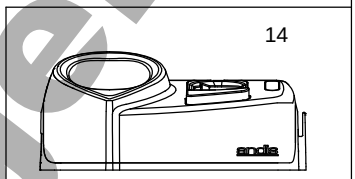

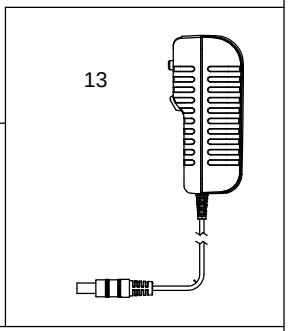

Item No.	Part No.	Description	Qty. Req'd
1		Lower Housing	
1a	200002	Lower Housing - Metallic Blue	1
1b	200004	Lower Housing - Metallic Red	1
1c	68341	Lower Housing - Metallic Purple	1
1d	68343	Lower Housing - Black	1
1e	68345	Lower Housing - Pink	1
1f	200091	Lower Housing - Lime Green	1
2		Upper Housing	
2a	200006	Upper Housing - Metallic Blue	1
2b	200007	Upper Housing - Metallic Red	1
2c	68342	Upper Housing - Metallic Purple	1
2d	68344	Upper Housing - Black	1
2e	68346	Upper Housing - Pink	1
2f	200092	Upper Housing - Lime Green	1
3	68259	Housing Screw	2
4	68254	Light Pipe	1
5	68167	Switch Button	1
6	68168	Switch Actuator	1
7	68169	Switch Lock	1
8	68176	Battery Eject Spring	1
9	68247	Battery Latch Spring	2
10	68248	Battery Latch	2
11	68279	Switch Lock Tensioner	1

Item No.	Part No.	Description	Qty. Req'd
12	68332	Motor Assembly	1
13	68199	Wall Adaptor - Universal - for U.S.	1
14	68333	Charger Stand	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.

Form #	200098	Revision:	B	Date:	11/27/13

www.theEdgePro.com